

# FARGO® C50 Direct-to-Card Printer

PLT-01276, 1.0

**1**

Pull open the ribbon cartridge door.

**2**

Open new ribbon packaging and pull liner tab.

**3**

Remove the brace from the ribbon cartridge.

**4**

Insert ribbon cartridge.

**5**

Close ribbon cartridge door.

**6**

1) Open the card hopper door.  
2) Press lever card platform.

**7**

Insert cards.

**8**

Close card hopper door.

**9**

Open output hopper door.

**10**

1) Connect AC power cable to power supply.  
2) Insert the opposing AC power cable end into the AC outlet.  
3) Connect power supply to printer.

**11**

Do not connect the USB cable at this time. The USB cable is connected during driver installation.

**12**

Follow the on-screen instructions for installing the printer driver.



For additional information, visit [support.hidglobal.com](http://support.hidglobal.com)

**Included with your printer are the following items:**

- Power Supply
- US Power Cord
- European Power Cord
- Declaration of Conformity
- Software Installation CD (includes C50 User Guide and Fargo Workbench Printer Utility)

This Quick Start Guide is for informational purposes only. HID makes no warranties, expressed or implied, in this summary. Company, product names and data used in sample output are fictitious. Specifications are subject to change without notice.

HID GLOBAL, HID, the HID logo and Fargo are the trademarks or registered trademarks of HID Global Corporation, or its licensors, in the U.S. and other countries.

©2013 HID Global Corporation/ASSA ABLOY AB. All rights reserved.

